Quick Programming Tech Tips

Big Button Remote

Big Button (Potenza ST)

- 1. Turn on the TV.
- 2. Push and hold in both the TV button and the OK/SEL button at the same time for about 3 seconds until the TV button stays lit up and then release both buttons.
- 3. Point the remote at the TV and push the three digit setup code for the band name of TV you purchased located in the "setup codes" PDF under TV and then Digital TV instructions on our website. If the TV turns off, push and release the TV button to lock in the code. If it does not turn off, just enter in the next three digit setup code until it does turn off. If you try all the codes and the TV does not off, start on step 1 again skipping this step 3 and going to step 4.
- 4. Start pushing and releasing the CH up or down button about once every second or so until your TV turns off. This could take several minutes until it turns off. Once it does, push the TV button one time and release it to lock in the code. Then it should turn on and off the TV and also adjust the volume. If the TV turns off, but you pushed the CH up or down button a few times after that and can't get it to turn back on, start on step 2 again.
- 5. If you have any troubles getting the remote to program, please call the office (845-2101) for assistance.











albanytel.com 320.845.2101



Technology. All the Way Home.