

# Quick Programming Tech Tips

## Standard Remote

### Small Button (Potenza ST with LED)

1. Turn on the TV.
2. Push and release the TV button on our remote (right across from the power button) and it will flash red.
3. Push and hold in the setup button (right under the TV button) until it flashes red two times and release it.
4. Point the remote at the TV and push the four digit setup code for the band name of TV you purchased located in the "program your TV to the remote" PDF starting on page 9 under TV and then Digital TV instructions on our website. Then push the power button and if the TV turns off, push & release the setup button to lock the code into the remote. If it does not turn off, start on step 2 again using the next code on the list. If none of the codes turn off the TV, start on step 2 again skipping this step 4 and going to step 5.
5. On the number keys below on the remote push 991 and then push the power button. If your TV turns off, then it has the correct code, if not then start pushing and releasing the + on the channel (CH) button about once every second or so until your TV turns off. This could take several minutes until it turns off. Once it does, push the setup button one time and release it to lock in the code. Then it should turn on and off the TV and also adjust the volume. If the TV turns off, but you pushed the + channel button a few times after that and can't get it to turn back on, start on step 2 again.
6. If you have any troubles getting the remote to program, please call the office (845-2101) for assistance.



albanytel.com  
320.845.2101



*Technology. All the Way Home.*